


Grenadier Winch Bumper Installation Guide

Recommended winches: Warn Evo 10S (89611) or 12S (103255)

- 1.) Remove OE bumper plastics to expose rebar, then remove rebar

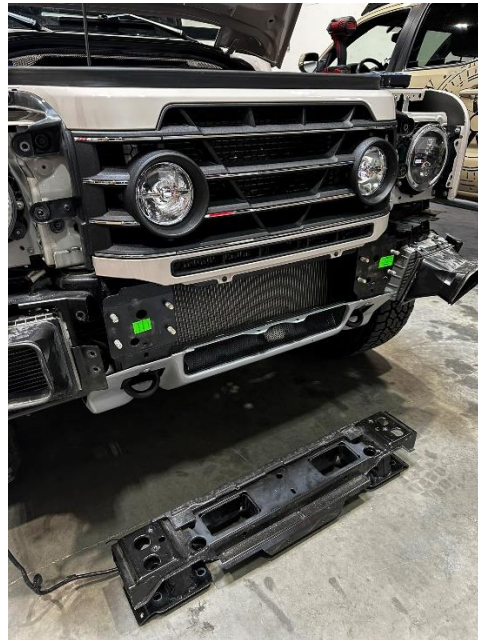


- 2.) Unpack Warn 12k Winch and clock winch so that the clutch lever is facing the base or mounting point of the winch




- 3.) Remove relay pack housing cover from the winch. Then remove the remote plug and plug cover from the housing. You will need to extend the remote plug wire in order to relocate it to mount on the bumper face.



- 4.) Drill holes to mount the remote plug into the face of the bumper. Then bolt it in.
- 5.) Bolt winch into bumper assembly utilizing Aries 2156070 offset fairlead and attach extended wiring for the winch remote.

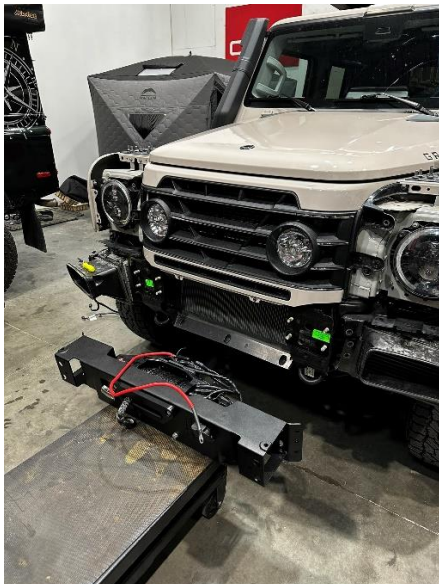

6.) Install bumper/winch assembly onto vehicle. (Some minor trimming of inner grille plastics may be needed to allow winch wiring to clear)

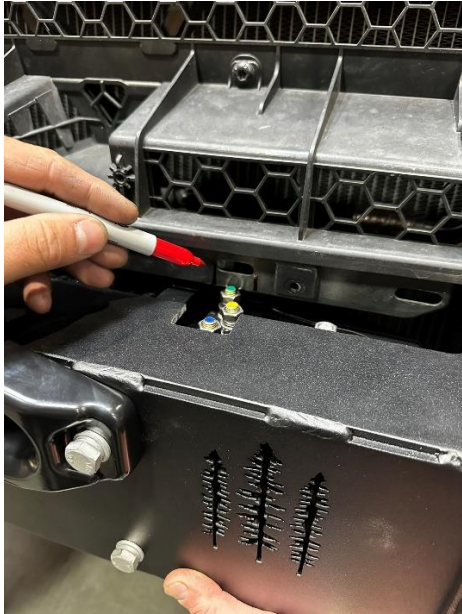

Reinstall all factory bumper plastics.

