

INSTALLATION GUIDE



**AGILE
OFFROAD**
SMARTER THAN DIRT®

**IOPEDAL THROTTLE TUNER SUPPLEMENTAL
INSTALLATION INSTRUCTIONS**




1. Locate and remove the bolt plug at the base of the gas pedal assembly.



2. Use a T30 Torx bit to remove the bolt at the base of the gas pedal assembly. Pull up and forward to remove the gas pedal assembly from floor mount.



3. Detach the stud mounted wire harness clip and pull the slack of the harness out from behind mat.

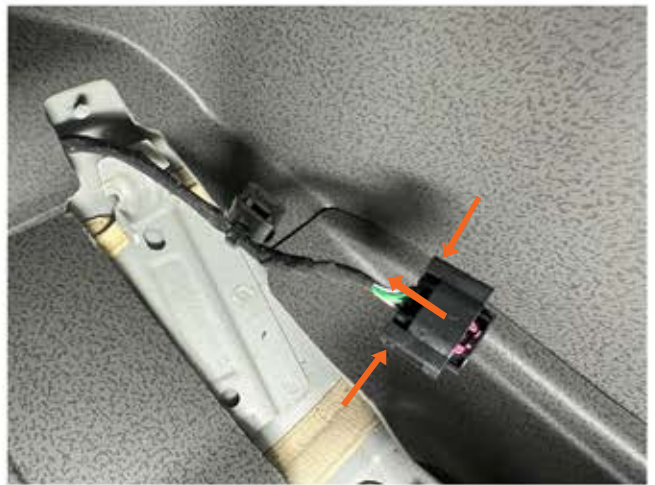

4. Disconnect the wire harness connector from the gas pedal assembly by pressing on the two side tabs while simultaneously pulling on connector.



5. Remove the two front floor mat nut clips located behind the brake pedal assembly. It is not necessary to completely remove mat.



6. Pull off the door sill molding.



7. Unscrew the center floor mat retainer nut and completely remove floor mat.



8. Partially remove the center console side panel by pulling straight out on panel.



9. The supplied cable goes in between the gas pedal and the original connector.



10. Start by connecting the supplied cable to the original connector.



11. Connect the gas pedal connector to the gas pedal assembly. Run the module cable connector behind the flooring and up towards the center console. Re-install the gas pedal assembly. *Pedal assembly must hook to upper floor mount before installing lower bolt.*



12. The module connector will reach just below the AC vent.



13. Apply two strips of the supplied double sided adhesive tape to the module as shown.



14. Adhere the module to the transmission tunnel behind the flooring.



15. Re-install the center console side panel.



16. Re-install the center floor mat and the door sill molding.



17. Re-install the two front floor mat nuts clips.



18. Refer to IOPEDAL Quick Start Guide programming and drive settings.