



**TOUGHER**  
SEAT COVERS & ACCESSORIES

Unit C7 Prime Park  
Mocke Road, Diep River  
7800

**T:** +27 (021) 879-3304  
**W:** info@tougher.co.za



## FITTING INSTRUCTIONS

**1**

### FRONT SEAT BOTTOM


Separate the seat bottom from the backrest by undoing the webbing straps that join them. On the rear of your seat you will have a carpet flap, unhook the elastics under the seat that keeps the flap in place for easier access to the webbing straps. Loosely fit the seat cover to the seat base and feed the webbing straps attached to the rear end of the cover through. (Between the backrest and seat bottom.)

The cover will have x3 long webbing straps and x3 short straps with a ladder lock buckle on the end. Now from the rear, pull the webbing straps out to be able to start securing them. The long webbing strap will be threaded into the ladder lock on the short webbing strap, undo this.

Underneath your seat, towards the front, you will find a horizontal cylindrical bar, the long straps will need to loop over or under this bar and attach to the ladder lock buckle on the short straps and tightened.

Below is an example of one of the straps going over the horizontal bar and re-attaching to the ladder lock on the short webbing strap.

Repeat for all three straps.

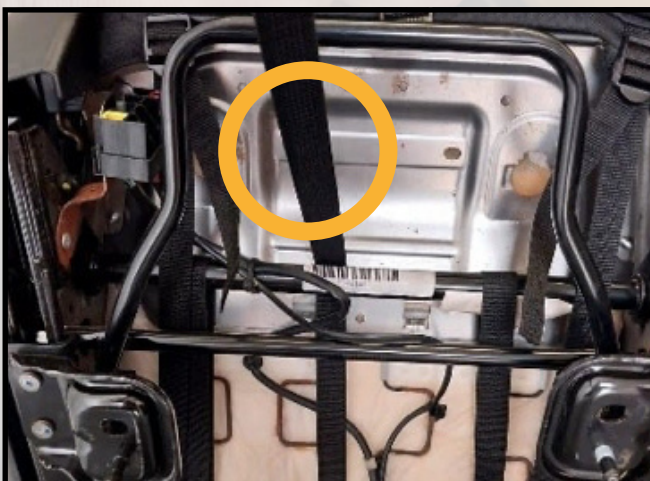

**2**

Long strap going over the horizontal bar.



**3**

Long strap secured over bar and re-attached to the ladder lock on the short webbing.





**4**

Side webbing to be fed through between the seat cushion and plastic and attached to the ladder lock on the backrest once the backrest is fitted.

**4**

The webbing straps on the sides of the seat base cover will attach to the ladder lock buckles on the rear bottom of the backrest cover once fitted. The strap facing the door will need to be fed through between the seat cushion and plastic, and attached to the ladder lock on the backrest once the backrest is fitted.

The x3 ladder locks on the front of the seat cover are for the webbing straps coming from the backrest cover.

## **5 FRONT SEAT BACKREST**

Remove the headrest.

Pull backrest cover over the backrest and feed the centre panel which will have x3 webbing straps through between the backrest and seat bottom. From the rear, pull the x3 webbing straps that you will now attach to the x3 ladder locks on the front end of the seat base cover.

The side webbings on the seat base can now be attached to the ladder locks on the rear bottom of the backrest.

Make adjustments as necessary and tension all the straps to secure the covers in place. The carpet flap on the rear can now be hooked into place again.

## **6 HEADREST COVER**

The headrest cover is best fitted with the headrest in its position on the backrest.

Pull cover over the headrest, adjust and position before joining the Velcro underneath the headrest.

## **7 CENTRE CONSOLE COVER**

In it's open position carefully slide elastic to fit the underside of console and adjust cover into place.

## **8 60/40 SPLIT REAR BENCH BACKREST**

Remove the headrests.

For the 40 backrest side, separate the velcro on the backrest and slip the cover over the backrest and push the front part of the cover through, (between the backrest and seat bottom) and simply join the velcro of the front panel to that of the rear panel.


For the 60 backrest side, separate the velcro on the rear and bottom of the cover to be able to slide the cover in behind the seatbelt so it is positioned between the backrest and the seatbelt. The seatbelt should not be underneath the cover. Work the backrest into position and re-join the velcro on the rear before doing the front to rear panel.



## 9 REAR BENCH COVER

Pull the cover over seat bottom and lift the seat for easy fastening of the straps.

The webbing on the front end of the cover needs to be attached to the ladder lock buckle on the rear of the cover. Adjust cover and tighten straps.

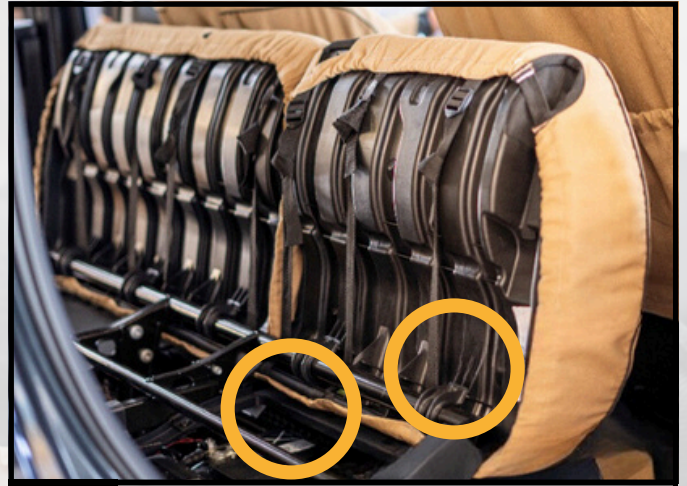

## 10 HEADREST COVER

The headrest cover is best fitted with the headrest in its position on the backrest.

Pull cover over the headrest, adjust and position before joining the Velcro underneath the headrest.

9

Be sure to feed the webbing underneath the bar. Having it on the outside of the bar might cause the seat not to fully go down into position as the straps will now push against this bar.

Ensure seatbelt buckles are accessible and back in position after seat covers have been fitted.

TOUGHER seat covers are made from a technical breathable cotton canvas blend and should only be washed in the good old fashioned way.

- Soak them overnight in bleach free detergent
- Wash them by hand
- Rinse the soap out
- Allow them to dry in the shade
- Iron while still slightly damp to reactivate the water repellent coating.
- DO NOT machine wash
- DO NOT tumble dry
- ONLY use cold water, NEVER HOT
- NO BLEACH
- DON'T SCRUB



**TOUGHER**  
SEAT COVERS & ACCESSORIES

Unit C7 Prime Park  
Mocke Road, Diep River  
7800

**T:** +27 (021) 879-3304  
**W:** info@tougher.co.za



**CARE INSTRUCTIONS**