

# Diesel 15,000 KM - 12-Month Service Intervals

				·					
Customer Name	VIN								
Date	Vehicle Reg	nicle Reg Mileage							
Vari									
Key  A= Adjust Top Up  L = Inspect  Mileage	15 000	30,000	4F 000	60,000	75,000	00.000	105 000		
A- Adjust rop op 1 - Inspect		30,000	45,000	60,000	75,000	90,000	105,000		
R = Replace IR = Inspect Replace Months	12	24	36	48	60	72	84		
Initial Checks									
Check for Outstanding Campaigns or Recalls	1	1	I	1	1	1	1		
Complete Body Inspection	1		1	- 1	1	1	1		
Complete VHC	1	1	ı	1	1	1	1		
Vehicle Functionality (Prior to lift)									
Horn & Toot Function Interior Lights		!					!		
Exterior Light Function (lenses & glass condition)	i	i	i	i	i	i	i		
Windscreen Wiper Blades (including rear)	IR	IR	IR	IR	IR	IR	IR		
Seatbelt & Buckle Check	1	ı	I	ı	I	ı	1		
Warning Triangle & Aux Equip	I	I	I	ı	1	ı	1		
First Aid Kit (check expiry date & record)	I	1	I	I	I	1	I		
Door Hinge, Check Strap & Lock Barrels Clean & Lube	Α	Α	Α	A	Α	Α	Α		
Read DTC's	I	1	1	I	1	1	1		
Reset Service Indicator	Α	Α	Α	Α	Α	Α	Α		
Under Bonnet Checks									
Windscreen Washers Fluid & Spray Pattern (heated wash	er A	Α	A	Α	A	Α	А		
jet operation if fitted)									
Headlight Adjustment (market specific)	Α .	Α .	Α .	Α .	A	Α .	Α .		
Skuttle Chamber Clean Drain Channels	<u>'</u>	ı		I	l A	<u> </u>	1		
Brake Fluid Check (inc water content)  Coolant Check (level & anti-freeze content) *	A	R	A	R	A	R	A		
Fuel Filter	A	A	A	Α	A	A	R		
Diesel Water Separator*	R	R	R R	R	R	R R	R		
Air Filter	IR	R		R	IR	R	IR		
Aux Belt	IR	IR	IR IR	IR	IR	IR	IR		
Power Steering Fluid	A	A	A	A	A	A	A		
Air Conditioning Operation	n I	ı î	1	n I	ı	n I	n I		
Vehicle Raised on Lift			·	•	·		•		
Check Tyre Pressures	Α	Α	Α	Α	Α	Α	Α		
Remove & Rotate Road Wheels (torque wheel nuts to spec)	Α	Α	A	Α	Α	Α	Α		
Record Tread Depths (including spare)	I	I	I	I	1	I	I		
Check Front & Rear Brake Pad Thickness	I	1	1	I	I	1	I		
Check Brake Disc Condition	1	1	1	1	1	1	1		
Oil & Filter Change	R	R	R	R	R	R	R		
Pipes & Hoses Condition	1	1	1	1	1	1	1		
Vac Pipes & Breather Condition	IR	IR	IR	IR	IR	IR	IR		
Transfer Box Oil*	Α	Α	A	Α	R	Α	Α		
Axle Oil*	R	Α	A	Α	Α	Α	R		
Gearbox Oil*	Α	Α	A	Α	Α	Α	R		
Brake & Fuel Lines (condition & routing)	I	I	I	I	I	I	I		
Exhaust System (condition & leaks)	I	I	I	I	I	I	I		
All Front & Rear Suspension - Ball Joints - Hub Swivel Joints - Steering Linkages & Fasteners for Wear & Security	1	1	I	I	I	I	I		
Inspect all Prop shafts for Wear & Security	1	I	1	I	1	I	1		







## Diesel 15,000 KM - 12-Month Service Intervals

Steering & Suspension Springs & Rubber Elements Boots Sleeves & Bushes for Wear & Security	I	I	Γ	- 1	I	I	1
Underbody & Frame inspection (corrosion & security)	I	I	L	I	I	1	I

# Vehicle on Floor

Handbrake Travel & Footbrake Operation	IR						
Climate Filter	R	R	R	R	R	R	R
AdBlue*	IR						

#### **Final Checks**

Road Test Vehicle - Check Gearbox & Transfer Box Operation

### I confirm I have completed the above procedure in accordance with the recommended Grenadier service schedule.


Technician Name Dealer Stamp
Technician Signature

Quality Check - Road Test (minimum test 5 KM)

Distance Covered

Tester Name

**Tester Comments** 

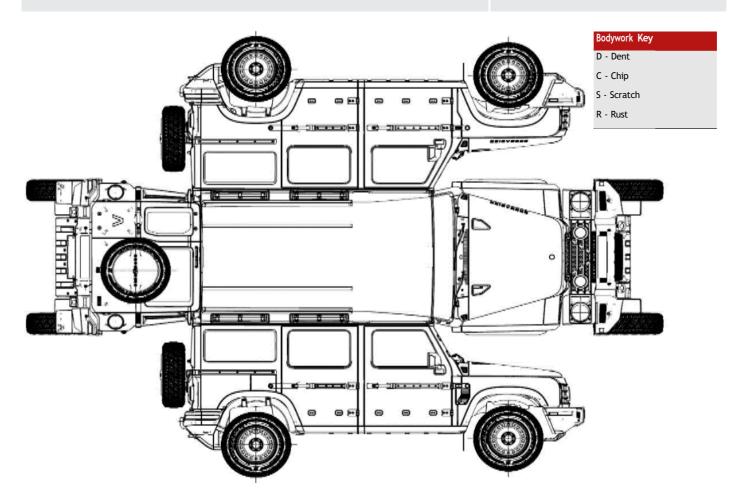

\*DWS market specific. \*Gearbox oil change every 7 years or 105,000 KM. \*Axle oil change at year 1 or 15,000 KM then at year 7 or 105,000 KM thereafter. \*Coolant change every 7 years or 105,000 KM. Transfer box oil change every 5 years or 75,000 KM. \*AdBlue customer liable - warning in cluster information display.



