

## Diesel 15,000 KM - 12-Month Service Intervals

			Dieset 1.	J,000 KM	- 12-MOII	cii Sei vice	- IIICEI V
Customer Name	VIN						
Date	Vehicle Reg			Mileage			
Key							
Mileage	15,000	30,000	45,000	60,000	75,000	90,000	105,000
A= Adjust 10p 0p   I = Inspect	12	24	36	48	60	72	84
IK = IIIspect Replace							
Initial Checks							
Check for Outstanding Campaigns or Recalls	I	1	1	1	1	1	1
Complete Body Inspection	1	1	I	I	T	I	I
Complete VHC	1	I	1	I	1	I	I
Vehicle Functionality (Prior to lift)							
Horn & Toot Function		- 1	1	1	1	1	1
Interior Lights	i	i	i	i	i	i	i
Exterior Light Function (lenses & glass condition)	1	1	1	1	1	1	1
Windscreen Wiper Blades (including rear)	IR	IR	IR	IR	IR	IR	IR
Seatbelt & Buckle Check	1	1	I	1	I	1	1
Warning Triangle & Aux Equip	I	1	I	1	1	1	I
First Aid Kit (check expiry date & record)	I	1	I	1	1	1	I
Door Hinge, Check Strap & Lock Barrels Clean & Lube	Α	Α	Α	Α	Α	Α	Α
Read DTC's	1	1	1	1	I	1	I
Reset Service Indicator	Α	Α	Α	Α	A	Α	Α
Under Bonnet Checks							
Windscreen Washers Fluid & Spray Pattern (heated washe	er A	A	А	A	А	А	Α
jet operation if fitted) Headlight Adjustment (market specific)	А	А	А	Α	А	Α	А
Skuttle Chamber Clean Drain Channels		ı		1	ı		1
Brake Fluid Check (inc water content)	A	R		R	A	1	A
Coolant Check (level & anti-freeze content)*	A	A	A A	A	A	R A	R
Air Filter & Clean Air Filter Box	IR	R	IR	R	IR	R	IR
Aux Belt	IR	IR	IR IR	IR	IR	IR	IR
Power Steering Fluid	A	A	A	A	A	A	A
Air Conditioning Operation	î	ı	ı	ı	ı	ı	ı
Vehicle Raised on Lift				•	•		
Check Tyre Pressures (including spare) Remove & Rotate Road Wheels (torque wheel nuts to	А	А	А	А	А	А	Α
spec)	Α	A	Α	A	Α	Α	Α
Record Tread Depths (including spare)	1	1	1	. 1	1	I	1
Check Front & Rear Brake Pad Thickness	1	1	1	1	1	1	I
Check Brake Disc Condition	1	1	1	1	1	1	I
Oil & Filter Change	R	R	R	R	R	R	R
Diesel Fuel Filter			R			R	
Diesel Water Separator Element*	R	R	R	R	R	R	R
Pipes & Hoses Condition	I	1	1	1	1	I	IR
Vac Pipes & Breather Condition	IR	IR	IR	IR	IR	IR	Α
Transfer Box Oil*	Α	Α	Α	Α	R	Α	Α
Axle Oil*	R	Α	Α	Α	Α	Α	R
Gearbox Oil*	Α	Α	Α	Α	Α	Α	R
Brake & Fuel Lines (condition & routing)	I	1	1	1	1	I	1
Exhaust System (condition & leaks)	I	I	1	I	I	I	I
All Front & Rear Suspension - Ball Joints - Hub Swivel Joints - Steering Linkages & Fasteners for Wear & Security	I	1	1	I	1	1	I
Inspect all Prop shafts for Wear & Security	1	1		ı	1		I







## Diesel 15,000 KM - 12-Month Service Intervals

Steering & Suspension Springs & Rubber Elements Boots Sleeves & Bushes for Wear & Security	T	I	I	I	I	1	I
Underbody & Frame inspection (corrosion & security)	1	I	1	I	1	1	1



Vehicle on Floor							
Handbrake Travel & Footbrake Operation	IR						
Climate Filter	R	R	R	R	R	R	R
AdBlue*	IR						

## Final Checks

Road Test Vehicle - Check Gearbox & Transfer Box Operation

## I confirm I have completed the above procedure in accordance with the recommended Grenadier service schedule.


Technician Name Dealer Stamp
Technician Signature

Quality Check - Road Test (minimum test  $5\ KM)$ 

Distance Covered

Tester Name

**Tester Comments** 

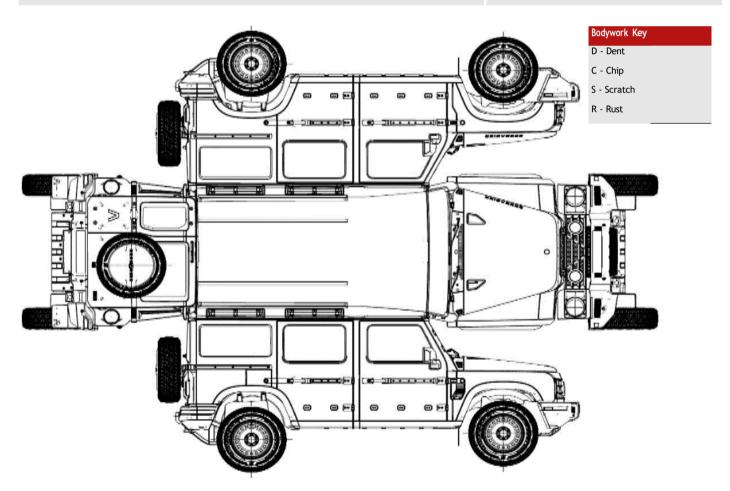

\*DWS market specific. \*Gearbox oil change every 7 years or 105,000 KM. \*Axle oil change at year 1 or 15,000 KM then at year 7 or 105,000 KM thereafter. \*Coolant change every 7 years or 105,000 KM. Transfer box oil change every 5 years or 75,000 KM. \*AdBlue customer liable - warning in cluster information display, AdBlue market specific.



