


## Petrol 12,000 Miles - 12-Month Service Intervals


	Customer Name	VIN			Date			
	License Plate	Repair Order #			Mileage			
	2.5555 / 14.65	epuii oruei #			micage			
	Key							
	A= Adjust Top Up I = Inspect Mileage	12,000	24,000	36,000	48,000	60,000	72,000	84,000
	R = Replace IR = Inspect Replace Months	12	24	36	48	60	72	84
	Initial Checks							
	Check for Outstanding Campaigns or Recalls	_	ı	1	1	1	1	1
	Complete Body Inspection	1	1	1	1	ſ	1	1
	Complete VHC	1	ı	i	i	i	i	i
	Vehicle Functionality (Prior to lift)		•	·				
	Horn & Toot Function Interior Lights	1	1	l I	1	1	1	1
	Exterior Light Function (lenses & glass condition)	i	i	i	i	i	i	i
	Windscreen Wiper Blades (including spare)	IR	IR	IR	IR	IR	IR	IR
	Seatbelt & Buckle Check	1	1	ı	1	I	1	ı
	Warning Triangle & Aux Equip	1	1	ı	1	I	1	I
	First Aid Kit (check expiry date and record)	1	I	I	I	1	1	I
	Door Hinge, Check Strap & Lock Barrels Clean & Lube	A	Α	Α	Α	Α	A	Α
	Read DTC's	I	1	I	I	1	1	I
	Reset Service Indicator	Α	Α	Α	Α	Α	Α	Α
T <sub>6</sub> .	Under Bonnet Checks							
	Windscreen Washers Fluid & Spray Pattern (heated washe jet operation if fitted)	r A	Α	Α	A	A	Α	А
	Headlight Adjustment (market specific)	Α	Α	Α	A	Α	Α	Α
	Skuttle Chamber Clean Drain Channels	1	1	1	1	1	1	ı
	Brake Fluid Check (inc water content)	Α	R	A	R	Α	R	A
	Coolant Check (level & anti-freeze content) *	А	Α	Α	Α	А	Α	R
	Spark Plugs				R			
	Air Filter		R		R		R	
	Aux Belt	IR	IR	IR	IR	IR	IR	IR
	Power Steering Fluid	Α	Α	Α	Α	Α	Α	Α
	Air Conditioning Operation	l l	ı	I	1	I	ı	I
×	Vehicle Raised on Lift							
X.Ī	Check Tyre Pressures	A	Α	Α	Α	А	Α	Α
	Remove & Rotate Road Wheels (torque wheel nuts to spe	ec) A	Α	Α	Α	А	А	Α
	Record Tread Depths (including spare)	I I	1	1	1	1	I	- 1
	Check Front & Rear Brake Pad Thickness	1	1	I	I	I	I	ı
	Check Brake Disc Condition	I	1	1	1	1	I	1
	Oil & Filter Change	R	R	R	R	R	R	R
	Pipes & Hoses Condition	l l	1	1	I	I	1	1
	Vac Pipes & Breather Condition	IR	IR	IR	IR	IR	IR	IR
	Transfer Box Oil*	Α	Α	Α	Α	R	Α	Α
	Axle Oil*	R	Α	А	Α	Α	Α	R
	Gearbox Oil*	Α	A	Α	A	Α	Α	R
	Brake & Fuel Lines (condition & routing)	l	!	I	1	l l	I	
	Exhaust System (condition & leaks)		1	I	I	1	I	
	All Front & Rear Suspension - Ball Joints - Hub Swivel Joints - Steering Linkages & Fasteners for wea & securi	ty	1	1	1	I	ı	I
	Inspect All Prop shafts for Wear & Security	1	I	1	I	I	I	I
	Steering & Suspension Springs & Rubber Elements Boots	5 1	1	1	1	1	ı	I
	Sleeves & Bushes for Wear & Security							







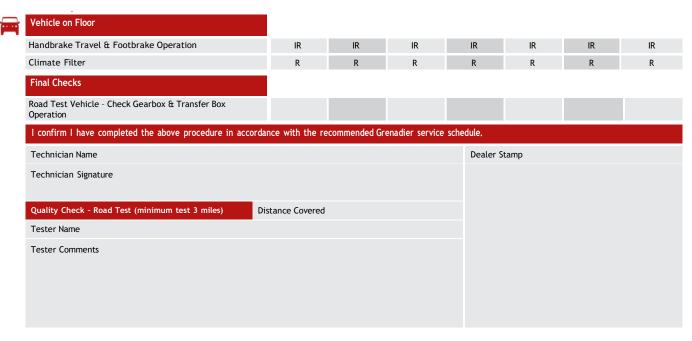

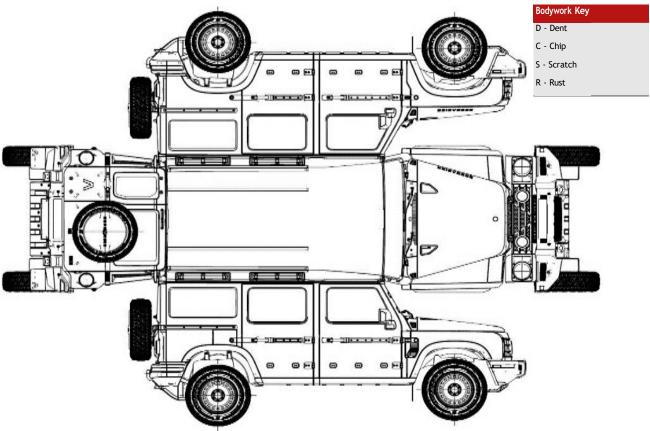

\*51AKA market specific \*Gearbox oil change every 7 years or 84,000 miles. \*Axle oil change at year 1 or 12,000 miles then at year 7 or 84,000 miles thereafter. \*Coolant change every 7 years or 84,000 miles. \*Transfer box oil change every 5 years or 60,000 miles.



